

K166 ASSEMBLY AND FITTING INSTRUCTIONS

Kit Contains

1 x Set of Assembly Instructions
1 x Hex Key, 5mm
4 x Clamps
4 x Capscrews, M8 x30
4 x Plastic Washers, M8
4 x Steel Washers, M8

Contact your supplier if any items are missing

Items you may require that are not included:
Tape Measure
Step Ladder (for taller vehicles)

Important Notes:


Disregard sections 2 - 5 in the Crossbar Assembly Instructions and refer to these instead.

Maximum
P-Bar
Load
Rating

65
kg

When Fitted and loaded correctly


1. Preparation of Crossbar Legs and Internal Clamp

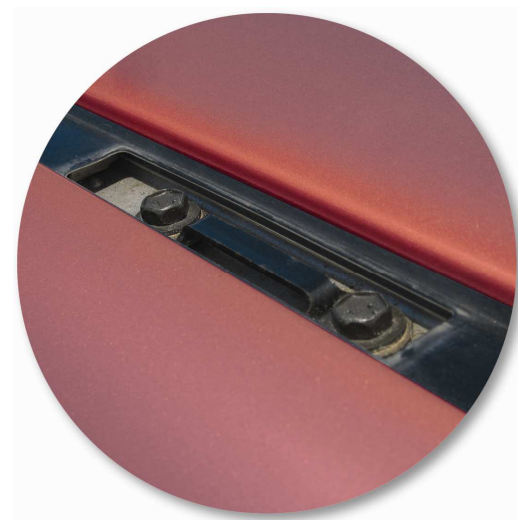

1.1


- Remove bottom adjusting screw on each leg
- Fit rubber pad to the bottom surface of each leg.
- There are two studs for correct location

- Identify the fixpoint positions
- Remove or slide fixpoint covers
- If covers been removed store them in a safe place

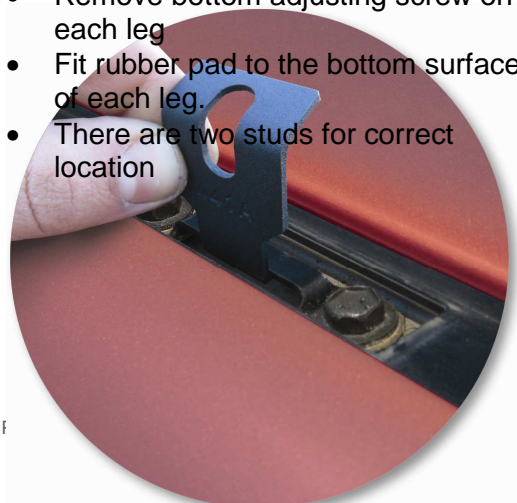

- Clamp hooks on to the attachment point
- Check that the clamp is fitted same as shown on the picture
- Top bend of a clamp should point to the roof centre
- Repeat in all four locations

2. Crossbar Fitment

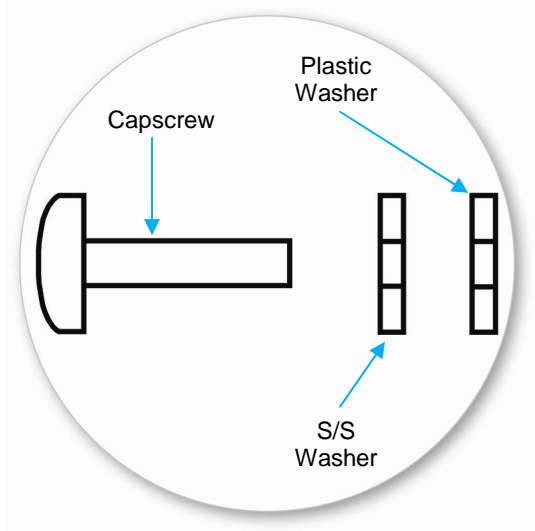

2.1

- Place Crossbar assemblies over Clamps
- Move Legs in or out to match Clamp positions
- Place washers on M8 capscrew



2.2

- Press down on crossbar to line up the thread on square nut in the foot and clamp
- Attach leg to clamp by fitting M8 capscrew through the clamp and screwing it into the square nut inside of the foot
- Repeat for all four Clamps



- Tighten M8 capscrews to 4Nm
- Press leg inwards and pull crossbar out to adjust position of crossbar on legs
- Check that crossbar overhang is even on

Warning Notes

- Use these instruction in conjunction with crossbar instructions

WARNING: Check the Tightness of Screws Regularly