

# K167 ASSEMBLY AND FITTING INSTRUCTIONS

## Kit Contains

1 x Set of Assembly Instructions  
1 x Hex Key, 5mm  
4 x Clamps  
4 x Capscrews, M8 x30  
4 x Plastic Washers, M8  
4 x Steel Washers, M8

Contact your supplier if any items are missing

Items you may require that are not included:  
Tape Measure  
Step Ladder (for taller vehicles)

### Important Notes:

Disregard sections 2 - 5 in the Crossbar Assembly Instructions and refer to these instead.

Maximum  
P-Bar  
Load  
Rating



50  
kg

When Fitted and loaded  
correctly

## 1. Preparation of Crossbar Legs and Internal Clamps



- Remove the bottom adjusting screw on each leg
- Fit a rubber pad to the bottom surface of each leg.
- There are two studs for correct location

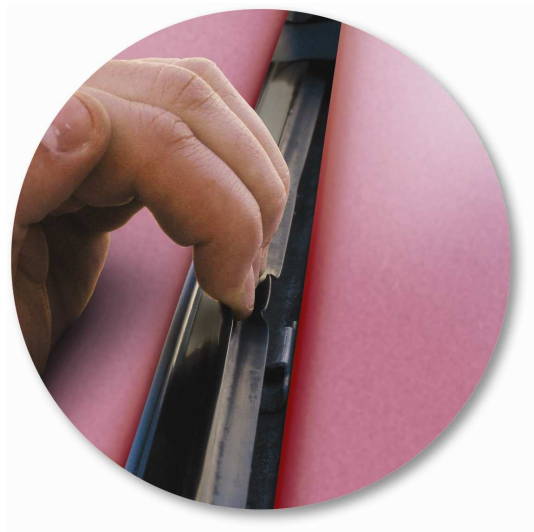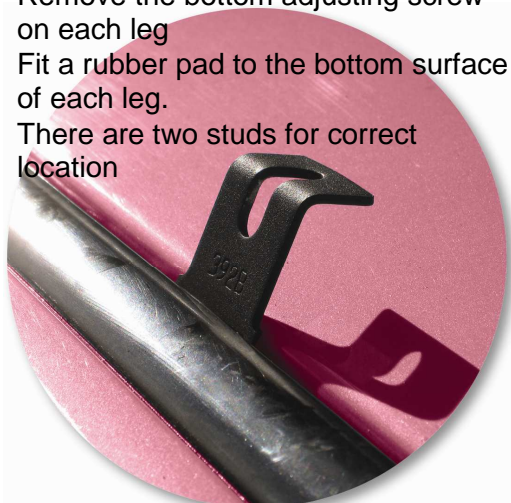


### 1.1

- Locate plastic ditch mouldings on roof
- Run your fingers along the inner edge of the moulding and locate mounting hooks

- Pull ditch moulding towards yourself to get an access to the mounting hooks
- Hook the clamps on to the mounting hooks
- Top edge of a clamp should point to the

## 2. Crossbar Fitment

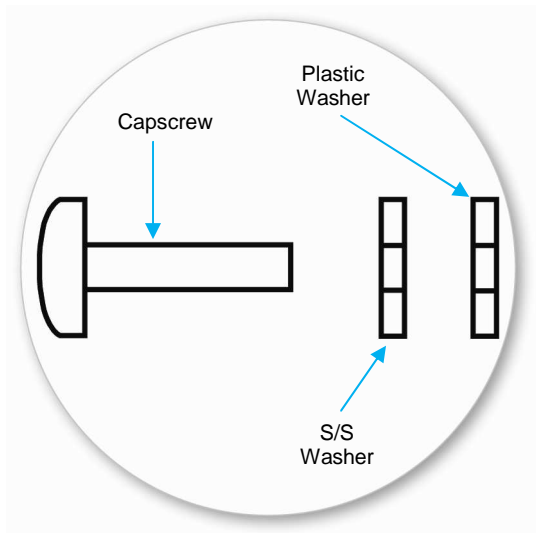

2.1

- Place crossbar assemblies over the clamps
- Move Legs in or out to match Clamp positions
- Place steel and plastic washers on M8 capscrew in a same sequence as shown on the picture above



2.2

- Press down on crossbar to line up the thread on square nut in the foot and clamp
- Attach leg to clamp by fitting M8 capscrew through the clamp and screwing it into the square nut inside of the foot
- Repeat for all four Clamps



- Tighten M8 capscrews to 4Nm
- Press leg inwards and pull crossbar out to adjust position of crossbar on legs
- Check that crossbar overhang is even on

### ***Warning Notes***

---

- Use these instruction in conjunction with crossbar instructions

***WARNING: Check the Tightness of Screws Regularly***