

K176 ASSEMBLY AND FITTING INSTRUCTIONS

Kit Contains

- 1 x Set of Assembly Instructions
- 1 x 5mm Hex Key
- 4 x Fixpoint Clamps
- 4 x Stepped Rubber Pads
- 4 x Spring Washers, M6
- 4 x Steel Washers, M8
- 4 x Capscrews, M6 x 10
- 4 x Capscrews, M8 x 30

Important Notes:


Disregard sections 2 - 5 in the Crossbar Assembly Instructions and refer to these instead.

Maximum
P-Bar
Load
Rating

60
kg

When Fitted and loaded
correctly

1. Crossbar Legs Preparation and Clamp Fitment

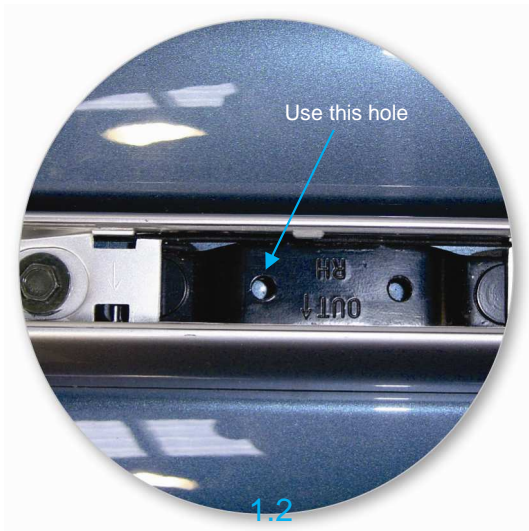

- Remove the bottom adjusting screw on each leg
- Fit a stepped rubber pad supplied with this kit on to the bottom surface of each leg. The four rubber pads supplied with the crossbars cannot be used on this vehicle
- There are two studs on pad for correct location on crossbar foot.

- Locate and
- Store these
- Use the M
- the fixpoint

- Put spring washers on to M6 capscrews and use them to attach clamps to the fixpoints
- Tighten capscrews with 5mm Allen Key
- Ensure that bend on vertical face of clamp pointing towards the centre of the vehicle roof

2. Crossbar Fitment



2.1

- Place crossbar assemblies over the fixpoints and adjust crossbar legs to match clamps
- Select M8 steel washers and place them on to M8 capscrews
- Put the capscrews through the fixpoint clamps
- Tighten them into the thread on the bottom of the crossbar leg
- The legs may need to be adjusted to keep clamps vertical



2.2

- Tighten M8 capscrews to 4Nm. (Refer to Note 4B on the Crossbar Assembly Instructions)
- Check that rubber pads are sitting flat on vehicle roof
- Tighten top adjusting screws to 4Nm
- Make sure that crossbars sit firm on vehicle roof
- Fit the four leg cover panels by hooking them in at top first then clipping them in at the sides.

Warning Notes

- Use these instruction in conjunction with crossbar instructions

WARNING: Check the Tightness of Screws Regularly