

K321 ASSEMBLY AND FITTING INSTRUCTIONS

Kit Contains

1 x Set of assembly instructions
1 x Hex Key, 5mm
4 x Clamps
4 x Capscrews, M8 x30
4 x Plastic Washers, M8
4 x Steel Washers, M8

Contact your supplier if any items are missing

Items you may require that are not included:

Tape Measure
Step Ladder (for taller vehicles)

Important Notes:

Disregard sections 2 - 5 in the Crossbar Assembly Instructions and refer to these instead.

Maximum
P-Bar
Load
Rating

40
kg

When Fitted and loaded correctly

1. Crossbar Legs And Internal Clamp Preparation




- Remove the bottom adjusting screw on each leg
- Fit a rubber pad to the bottom surface of each leg.
- There are two studs for correct location



- Stand on a ladder to view the vehicle plastic roof mouldings
- There two mounting points along each roof moulding
- Remove covers from mounting points
- Store these covers in a safe place for future use

- Hook a clamp on to the mounting point
- Check that clamp is fitted correctly. Top edge of a clamp should point to the roof centre
- Repeat in all four mounting points

2. Crossbar Fitment

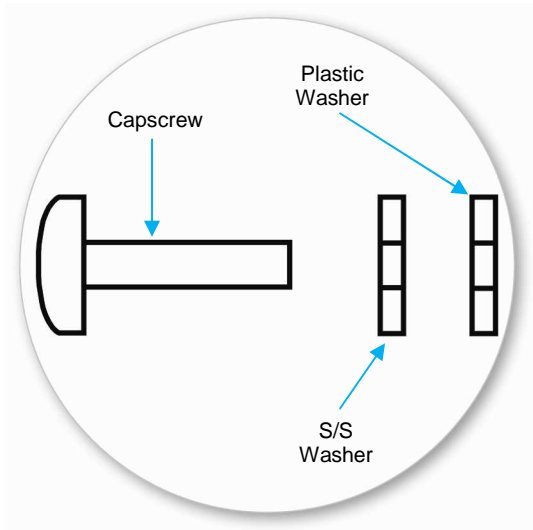

2.1

- Place crossbar assemblies over the clamps
- Move crossbar legs in or out to match clamp positions
- Place steel and plastic washers on M8 capscrews in a same sequence as shown on a picture above



2.2

- Press down on crossbar to line up the thread on square nut in the foot and clamp
- Attach leg to clamp by fitting M8 capscrew through the clamp and screwing it into the square nut inside of the foot
- Repeat for all four legs



- Tighten M8 capscrews to 4Nm
- Press leg inwards and pull crossbar out to adjust position of crossbar on legs
- Check that crossbars overhang is even on each side
- Tighten top adjusting screw to 4Nm on all four legs
- Fit four leg cover panels by hooking them in at top first and then clipping them in at the sides.

Warning Notes

- Use these instruction in conjunction with crossbar instructions

WARNING: Check the Tightness of Screws Regularly