

Caution


- Tie down long or wide loads at the front and rear of the vehicle with non-elastic straps. If it looks like it can catch some air, it will. **TIE IT DOWN!**
- When loading your surf gear or kayak, ensure that it is mounted correctly using the tie downs provided and is positioned centrally, parallel to the vehicle.
- Check straps periodically during travel and tighten if necessary. Replace any straps that are worn or frayed before using (see your Prorack dealer).

Important Warning

- It is critical that all Prorack racks and accessories be properly and securely attached to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others.
- You are responsible for securing the racks and accessories to your car, checking the attachments prior to use, and periodically inspecting the products for adjustment, wear, and damage. Therefore, you must read and understand all of the instructions and cautions supplied with your Prorack product prior to installation or use.
- If you do not understand all of the instructions and cautions, or if you have no mechanical experience and are not thoroughly familiar with the installation procedures, you should have the product installed by a professional installer such as a boat carrier specialist.


Kit Contents

Item	Component	Qty
1	21 mm Slot Adapter Base	1
2	Slot Adapter Spring	1

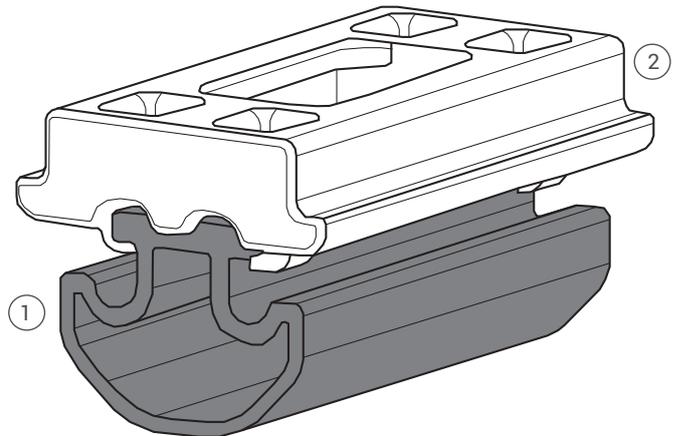


1 Check Carrier Mounting Instructions

Check your mounting instructions for your carrier. Does it have (A) a removeable T-Bolt or (B) a fixed/drop and turn?

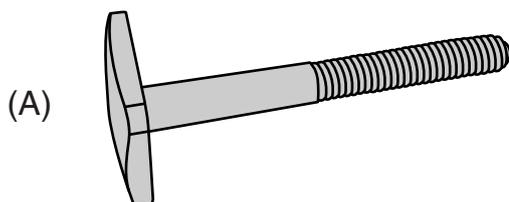


(B)

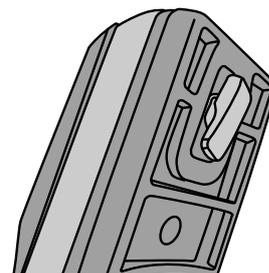

Please follow steps specific for (A) or (B).



Removable T-Bolt Specific Steps

- 41** Remove T-Bolt from your carrier as per your carrier's instructions

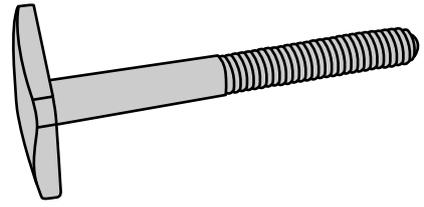


- 42** Disassemble Slot Adapter

Remove rubber spring from adapter base, if not already disassembled.

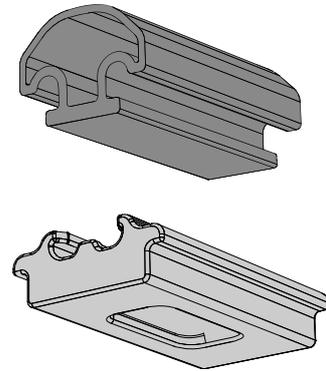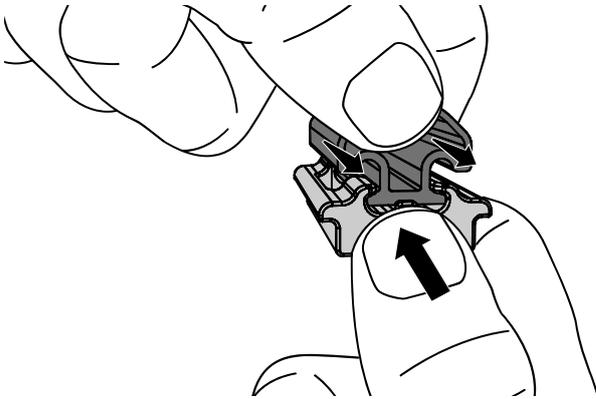



- 43** Insert T-Bolt

Insert T-Bolt into each adapter base as shown

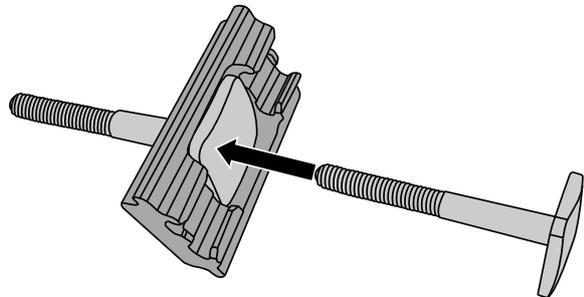


- 44** Insert T-Bolt

After inserting T-Bolt, reinsert rubber spring as shown.

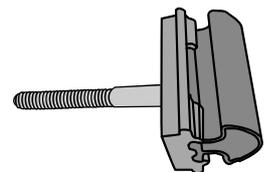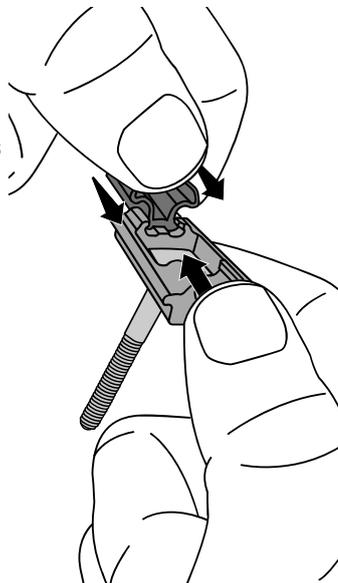

45 Insert Slot Adapter into Crossbar

Insert slot adapter into bar by angling in and pushing down as shown. Ensure T-Bolt is upright. Repeat for as many T-Bolts as your carrier has.

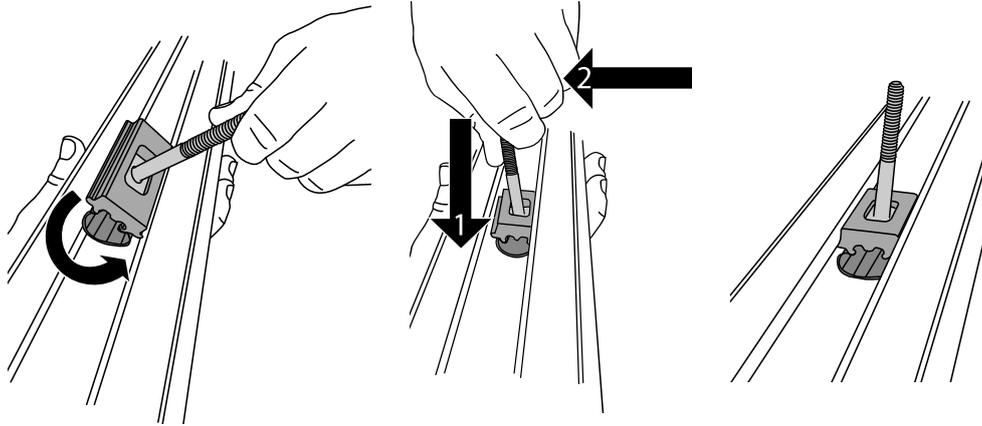


46 Refer to Carrier's Instructions

Follow the process in your carrier's instructions for securing to T-Bolts.


Fixed/Drop-And-Turn Specific Steps

B1 Ensure rubber spring is attached to the adapter base.

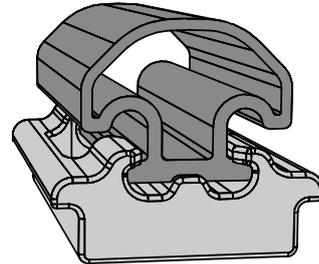


B2 Insert Slot Adapter into Crossbar

Insert slot adapter into bar by angling in and pushing down with your finger as shown. Repeat for as many T-Bolts as your carrier has.

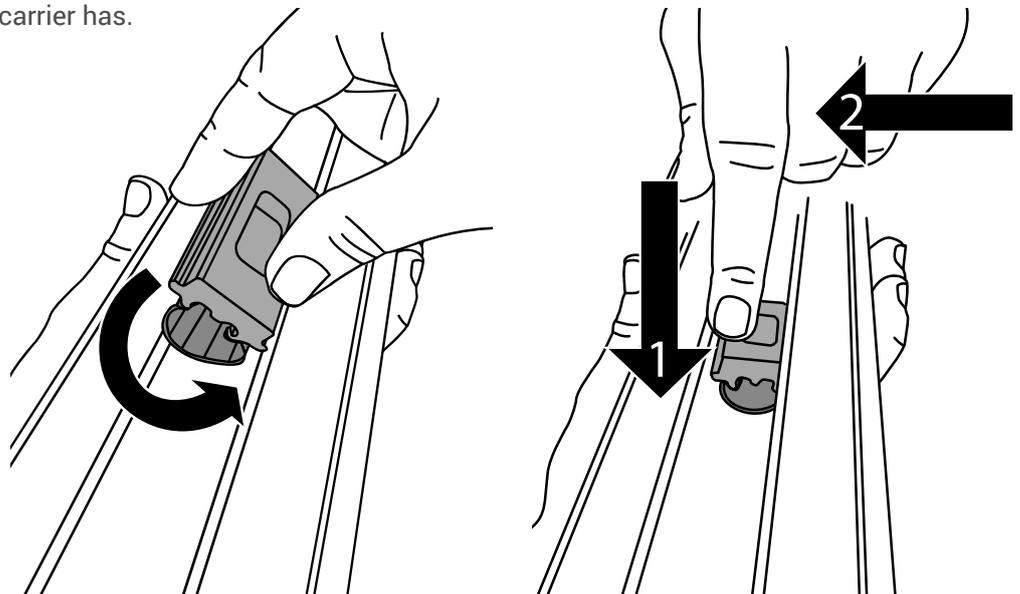

B3 Position Adapters Appropriately

Position adapters so they can engage with the carrier's T-Bolts.

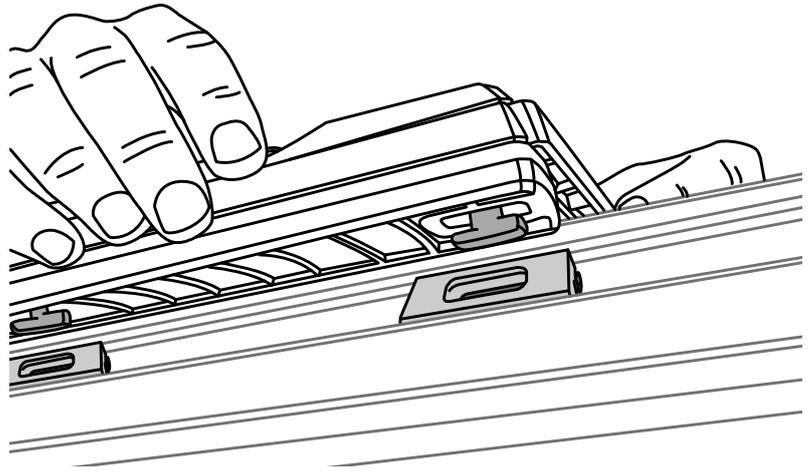


B4 Refer to Carrier's Instructions

Follow the process in your carrier's instructions for securing to T-Bolts.

Ensure Carrier is Secure


A7 After installation, ensure your carrier is secure.

B5

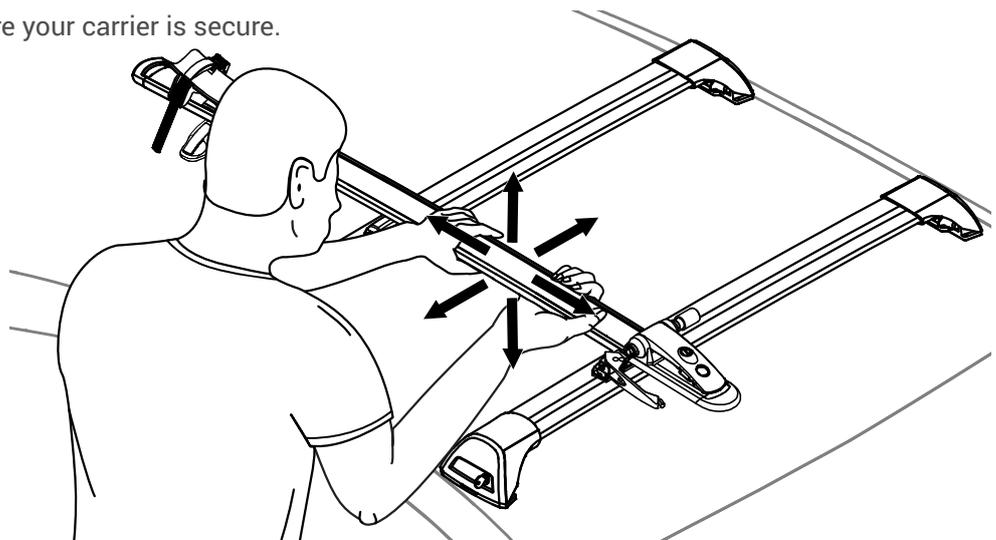


A8 For Removal - Removable T-Bolt Specific Step

For removal, push the slot adapter down, tilt and remove.

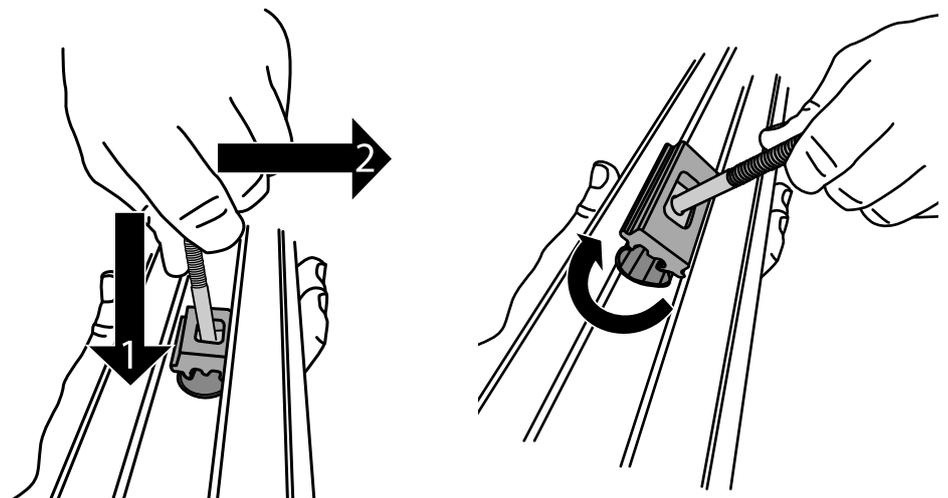

B6**For Removal - Fixed/Drop-and-turn
Specific Step**

For removal, push the slot adapter
down, tilt and remove.

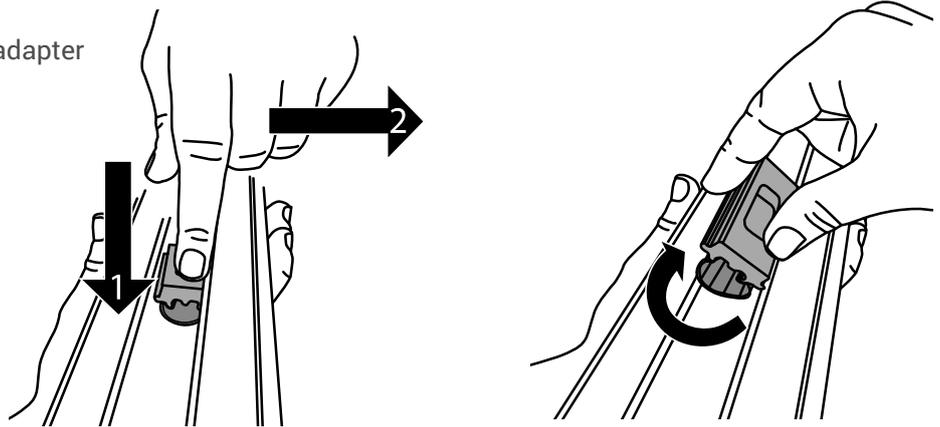

Prorack[®]
Ready for anything

Prorack
17 Hinkler Court, Brendale
QLD 4500, Australia

Freephone
AU: 1800 143 548
NZ: 0800 4776 722

www.prorack.com.au
www.prorack.co.nz

ALL CONTENT SUBJECT TO YAKIMA AUSTRALIA PTY LTD COPYRIGHT © 2017