



# High Lift Jack Holder

## First Time Installation

- Please read instructions carefully before installation.
- Check the contents of kit. Contact your Prorack dealer if any parts appear to be missing or damaged.
- Clean your roof racks prior to fitting the Prorack High Lift Jack Holder.

## Important Warning


- It is critical that all Prorack racks and accessories be properly and securely attached to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others.
- You are responsible for securing the racks and accessories to your car, checking the attachments prior to use, and periodically inspecting the products for adjustment, wear, and damage.
- If you do not understand all of the instructions and cautions, or if you have no mechanical experience and are not thoroughly familiar with the installation procedures, you should have the product installed by a professional installer such as a roof rack specialist.

## Tools Required

- 6 mm Allen Key (provided)
- Wrench

## Kit Contents


Item	Component	Qty
1	M8 x 25 mm Capscrew	4
2	M8 Spring Washer	4
3	M8 Flat Washer	4
4	M8 Spring Nut	4
5	M10 x 40 Bolt	1
6	M10 x 30 Bolt	1
7	M10 Spring Washer	2
8	M10 Flat Washer	2
9	Padlock Bracket	1
10	Clamp Bracket	1
11	Clamp	1
12	6 mm Allen Key	1

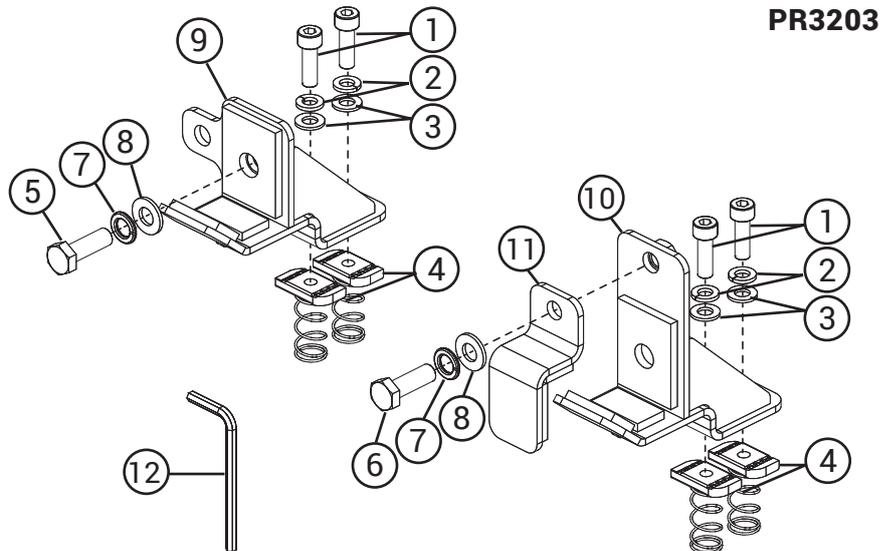

PR3203


## Installation with Prorack HD, Tradesman and other Heavy Duty Crossbars

- 1** Place 2x M8 Spring Nuts into each crossbar channel. Position where you want the accessory to be. Push down and twist Spring Nut to lock into place.

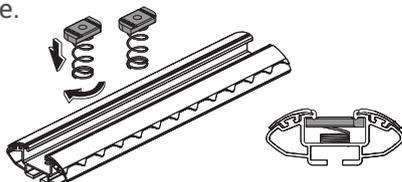


- 2** Fasten the Brackets onto the crossbars using 2x M8 Capscrews, 2x M8 Spring Washers and 2x M8 Flat Washers per Bracket.


Tighten Capcrews with Allen key to 4-5 N/m.

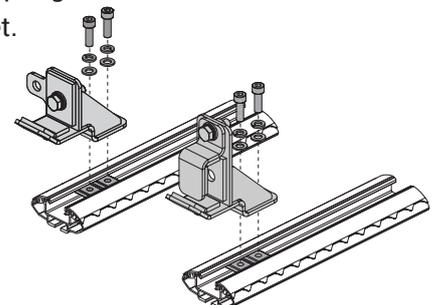



- 3** Secure the high lift jack onto the padlock bracket using 1x M10 x 40 Bolt, 1x M10 Spring Washer and 1x M10 Flat Washer as shown.

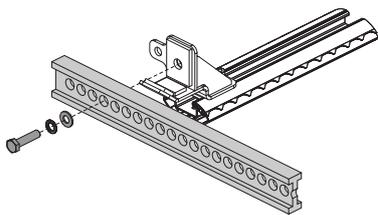

- 4** With the high lift jack securely in place, swing the Clamp down over the jack arm and tighten the M10 x 30 Bolt.

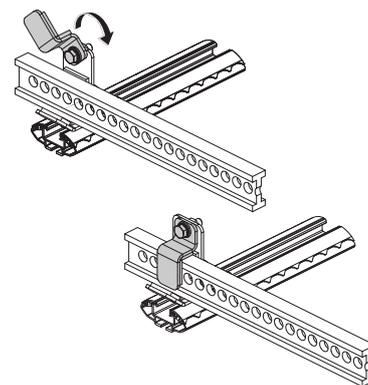

- 5** The jack can be secured with a padlock (not supplied) as shown for added security.

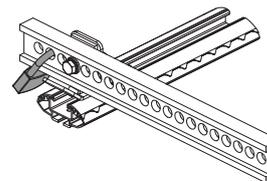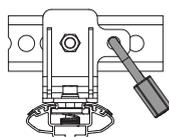

### **Recommendations**

- For added security, it is recommended to padlock the jack onto the holder.
- Check accessory is securely attached whenever you refit it to the vehicle. If the unit feels loose, refer to the fitting instructions and readjust.
- Regularly check all fasteners. This includes all attached accessories and roof racks.
- Ensure that all loads are distributed evenly across the roof racks and are fastened securely.
- Fit the accessory on passenger side of the vehicle when it is practical to do so.

### **Caution**

- A loaded roof rack system can alter the performance of your vehicle. Be especially aware of the effects of side winds, changing of direction, and braking performance. Avoid rapid acceleration and deceleration. Drive Carefully.
- Make sure all loads are securely fastened with non-elastic straps. Check regularly during longer journeys.
- Never drive into a car wash with a roof rack system or accessories fitted.
- Do not exceed the vehicle manufacturer's roof load rating. Total load equals weight of roof racks + accessories + cargo/ equipment.
- The speed driven must be suited to the load transported and to official speed limits.
- Any changes made to the roof racks and accessory racks as well as the use of spare parts or accessories other than those supplied by the manufacturer will lead to the lapsing of the manufacturer's warranty and liability for any material damage or accidents. You should observe these instructions to the letter and only use the original parts supplied.

  
**Prorack**<sup>®</sup>  
*Ready for anything*